

Interstate Batteries Tradeshow Rental Instructions

Please ensure you return tradeshow rental items immediately after the end of your event. Delays in returning items may affect other team members who have rented these items for their events.

Return labels are provided with shipments, but please contact shopinterstate-cs@halo.com for additional return labels if needed.

Please see attached assembly instructions for all available tradeshow rental items. You can also access setup videos at the links below:

6/8 Foot Convertible Table Throw: https://www.youtube.com/watch?v=Lil8-Ptd c4

Eurofit Banner Display: https://www.youtube.com/watch?v=ZUeA7Oh1m50

Eurofit Bow Display: https://www.youtube.com/watch?v=utrbVKiV9al

Please contact shopinterstate-cs@halo.com with any additional questions.

Economy Table Throw

Congratulations on the purchase of your Economy Table Throw.

Please read all of the information carefully and contact your distributor or supplier with any issues.



Throw Instructions



Step 1

Tear open the sealable reusable bag along the perforation.



Step 2


Place table throw over table. Position table throw with graphic in the front.

Storage Instructions



Step 1

Fold throw in thirds lengthwise, continue folding down to size to fit into bag.

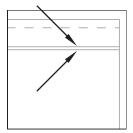

Step 2

Seal bag by aligning male/female parts together and applying pressure between thumb and forfinger sliding from either left or right.

Care Instructions

Convertible™ Table Throw

Congratulations on the purchase of your Convertible™ Table Throw.

Owner's Manual

Includes:
Assembly Instructions
Converting Instructions
Disassembly Instructions
Storage Instructions
Care Instructions
Warranty Information

Please read all of the information carefully and contact your distributor or supplier with any issues.



Assembly Instructions



Step 1Place table throw over table. Position table throw with top seam at rear of table and image is centered on front.

Converting Instructions



Step 1

Place table throw 8' throw over 6' table or 6' throw over 4' table. Position table throw with top seam at rear of table.



Step 2

Grasp the velcro tab closest to front of table. Align fabric and begin rotating fabric toward the back of the table.



Step 3

Wrap throw tightly around top edge of the table. Attach velcro hook tab to velcro loop tab on back of throw. Repeat process for other side of throw.

Converting Instructions (cont.)



Step 4

Attach remaining velcro hook tab and attach to velcro loop tab found underneath the top, back edge of table throw. Repeat process for other side of throw.



Step 5

The remaining fabric will be gathered neatly.

Disassembly Instructions



Step 1

Remove the throw from the table. Lay out throw flat on the floor.



Step 2

Fold throw in thirds following seam, then in half length-wise. The throw should now be long and narrow. Now fold the throw about every two feet to get it to fit into original poly bag or a similar storage bag.

Storage Instructions

Store in a cool, dry place preferably in a poly bag.

Care Instructions


Recommended for indoor use only.

Machine wash on gentle cycle using mild detergent. Tumble dry on low heat setting only. Do Not dry clean. Do Not iron.

3FT EuroFit Banner Display

Product Parts

- 1 Top Corner Pole (x2)
- 2 Top Horizontal Pole
- 3 Vertical Pole (x2)
- 4 Fabric Graphic
- 5 Horizontal Middle Pole
- 6 Base

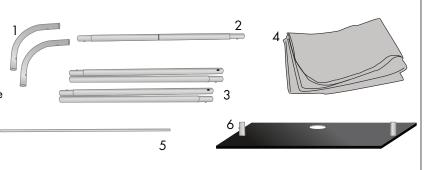




Display Set-Up

Step 1

Begin by removing all parts from the carry case and place on a clean, flat surface.


Step 3

 Attach both of the Vertical Shock-Corded Poles (2) into the ports on the Base (5).




Step 5

Attach the Top Corner Poles (1) and Top Horizontal Pole (2) to the Vertical Poles (3) as shown.

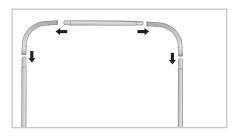

Step 2

 Assemble the two Vertical Shock-Corded Poles (2) by placing the taperred end of one pole into the large end of the next while pressing the snap button as shown.



Step 4

Insert the ends of the Horizontal Middle Pole (4) into both sides of the Vertical Shock-Corded Poles (2) as shown.



Step 6

Slide Graphic (3) over the top of the display as shown.




Storage & Care

Place all product parts into Carry Case and store in a cool dry location. Recommended for indoor use only. Machine wash on gentle cycle using mild detergent. Tumble Dry No Heat. Do NOT dry clean, Do NOT Iron.

EuroFit Fabric Display 8' and 10' Floor

Product Parts

- 1 Straight Shock Cord Pole (x2)
- 2 Curved Shock Cord Pole (x2)
- 3 Corners (x4)
- 4 Support Shock Cord Pole

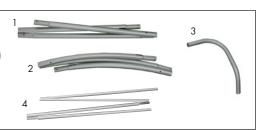

Note: Each pole end is labeled for ease of assembly.



Display Set-Up

Step 1

Begin by removing the parts from the Carry Case and place on a clean, flat surface.

Step 2

Assemble the Straight and Curved Shock Cord Poles (1,2) by placing tapered end of one pole into the large end of the next pole until the release button snaps into place.





Step 3

Create the bottom of the frame by attaching the Curved End Poles (3) to the assembled Curved Shock Corded Pole (2). Connect the other side of the Curved Shock Corded Pole (2) to the Curved End Pole (3).


Step 4

Create the sides of the frame by attaching the assembled Straight Shock Corded Poles (1) to their corresponding Curved Ends (3).




Step 5

Lay the frame on the floor (so the Curved Shock Cord Poles (2) is raised off the floor).

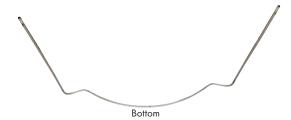

Step 6


Attach the open side of the assembled Straight Shock Cord Poles (1) to their corresponding Curved Ends (3).

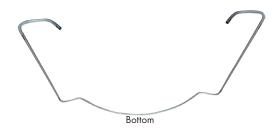

Display Set-Up Continued...

Step 7

Complete the top of the frame by attaching the remaining Curved Shock Corded Pole (2) to the corresponding assembled Curved End Poles (3).

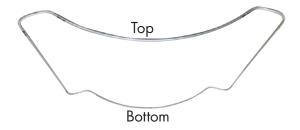

Step 8

Insert the Support Shock Corded Pole (4) into the holes found in the center of each of the Curved Shock Corded Poles (2).





Step 7

Before adding the graphic, make sure your floor is clean under the assembled frame.

Position the graphic facing the inner curve of the poles and slip it on until the frame is snug inside the graphic.

*This step is easier with two people, but can be done by one person.



Step 8

Once the graphic is snug, zip the graphic shut.



Easily lift the display and move to desired location.

Storage

Place all product parts into Carry Case and store in a cool dry place.



Care

Recommended for indoor use only.

Machine wash on gentle cycle using mild detergent. Tumble dry low heat setting only. Do Not dry clean, Do Not iron.